

Oster®

Inspire | COLLECTION

User Manual 4207 ELECTRIC WINE OPENER

4208 ELECTRIC WINE OPENER WITH CHILLER

Manual de Instrucciones 4207 SACACORCHOS ELÉCTRICO

4208 SACACORCHOS ELÉCTRICO CON ENFRIADOR

Manuel d'Instructions 4207 OUVRE-BOUTEILLE ÉLECTRIQUE

4208 OUVRE-BOUTEILLE ÉLECTRIQUE AVEC RÉFRIGÉRATEUR

MODELS/MODELOS
MODÈLES **4207, 4208***



*Wine Chiller exclusive to 4208

visit us at www.oster.com

P.N. 117869/117871

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Do not operate electric wine opener with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
- To protect against risk of electrical shock, do not put the electric wine opener in water or other liquid. This may cause personal injury and/or damage to the product.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- Do not use the electric wine opener for other than intended use.
- This product is intended for normal domestic household use only.
- When using or recharging the electric wine opener keep your workspace clean and free from potential hazards.
- For indoor use only. Do not expose the electric wine opener or charging unit to rain or other extreme conditions
- Never force the electric wine opener onto a bottle or attempt to speed up the mechanism. The electric wine opener will work best when it is operated at it's intended speed.
- Do not touch or adjust the electric wine opener's mechanism or the corkscrew spiral. Only hold the electric wine opener by its plastic housing.
- Do not attempt to open bottles if the switch is not working correctly.
- Do not attempt to open the electric wine opener or the recharging unit. It has no serviceable parts. Your electric wine opener is guaranteed for one year. In the event of a malfunction in this time please contact our customer services department.
- Only recharge the electric wine opener using the recharging unit and power cord supplied.
- Never remove the plug from the socket by pulling the power cord.

CAUTION: Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

THIS UNIT FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

WELCOME

Congratulations on your purchase of an OSTER® Electric Wine Opener!

Thank you for purchasing the OSTER® Electric Wine Opener. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements.

LEARNING ABOUT YOUR ELECTRIC WINE OPENER



PREPARING TO USE YOUR ELECTRIC WINE OPENER FOR THE FIRST TIME

Read and follow all the instructions for this section on Use and Care and find a place to keep this instruction manual ready for future reference.

For your convenience, record the complete model number (*located on the back of the motor*) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

NOTE: The use of attachments not recommended or sold by Sunbeam Products may cause fire, electrical shock, injury or damage to the product.

OPERATING INSTRUCTIONS

CONNECTION AND USE

We recommend that you charge your electric wine opener for at least eight hours before using it for the first time. Please follow the instructions for recharging below:


RECHARGING YOUR ELECTRIC WINE OPENER

Plug one end of the adapter cord into the base of the recharging unit and the other end into a main socket. Place the electric wine opener into recharging unit ensuring that it is firmly in position and that it is fully engaged with the recharging connection. It will take approximately 6-8 hours to recharge your electric wine opener. When your electric wine opener is fully recharged it can be used to open approximately 40 bottles.

TO OPERATE YOUR ELECTRIC WINE OPENER

The electric wine opener is operated by one single switch. The switch has two functions.

Press the lower part of the switch to remove a cork from a bottle. Press the upper part of the switch to release a cork from the mechanism after you have removed from the bottle. (see pic 1)

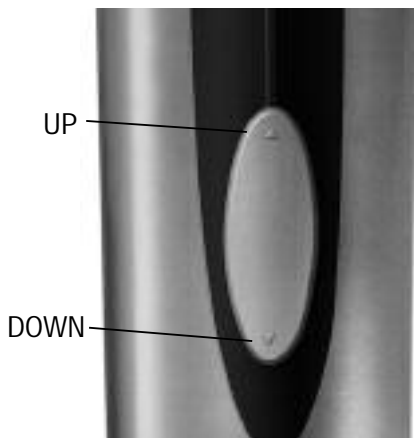

PIC 1

Before removing the cork you must remove any foil from the bottle using the foil cutter provided. (see pic 2)

1. Place the electric wine opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the the electric wine opener at an angle to the bottle it will not remove the cork properly. (see pic 3)
2. Hold the electric wine opener firmly and depress the lower part of the switch. The corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the electric wine opener mechanism has stopped the cork has been fully removed from the bottle.



PIC 2



PIC 3

3. Lift the electric wine opener away from the bottle to remove the cork simply depress the upper part of the switch. The spiral will turn in an anti clockwise direction and release the cork. (see pic 4)

4. Always return the electric wine opener to the recharging unit when finished with it. This will protect the mechanism while it is not in use.

Note: It has been noted that the electric wine opener may experience problems with a small percentage of plastic/synthetic corks and undersized corks, if in this case the cork should be removed manually.



PIC 4

One-Year Limited Warranty

Sunbeam Products, Inc. (“Sunbeam”), d/b/a Jarden Consumer Solutions, warrants that for a period of ONE year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during this warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an Authorized Service Center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

How To Obtain Warranty Service: Please see the country specific warranty insert or contact your local authorized distributor.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.



For product questions contact:
Sunbeam Consumer Service

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2005 Sunbeam Products, Inc., d/b/a Jarden Consumer Solutions. All rights reserved.
In the U.S., distributed by Sunbeam Products, Inc.,
d/b/a Jarden Consumer Solutions. Boca Raton, FL 33431
In Canada, imported and distributed by Sunbeam Corporation, Limited.

Pour les questions de produit:
Sunbeam Consumer Service

États-Unis : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2005 Sunbeam Products, Inc., d/b/a Jarden Consumer Solutions. Tous droits réservés.
Aux États-Unis, distribué par Sunbeam Products, Inc.,
d/b/a Jarden Consumer Solutions. Boca Raton, FL 33431
Au Canada, importé et distribué par Sunbeam Corporation, Limited.

Para preguntas sobre los productos llama:
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759
Canadá : 1.800.667.8623
www.oster.com

©2005 Sunbeam Products, Inc., d/b/a Jarden Consumer Solutions. Todos los derechos reservados.
En los EE. UU., distribuido por Sunbeam Products, Inc.,
d/b/a Jarden Consumer Solutions. Boca Raton, FL 33431
En Canadá, importado y distribuido por Sunbeam Corporation, Limited.