



User Manual **Buffet Server and Warming Tray**

Manual de Instrucciones **Fuente para servir y Bandeja para calentar**

MODEL/MODELO CKSTBSTW00



Visit us at www.oster.com

P.N. 133706

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS before using.
- To protect against risk of electrical shock, do not put appliance in water or other liquid.
- Surfaces are HOT. Do not touch surfaces that may be hot. Always use hot pads or potholders until unit cools.
- Use handles and knobs provided.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Do not operate this appliance or any other electrical equipment with a damaged cord or plug, or after the unit malfunctions, or is dropped or damaged in any manner. Contact Customer Service (see warranty) for examination, repair, or mechanical adjustment.
- The use of accessory attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Always check that the control is off before plugging cord into wall outlet. To disconnect, turn the control knob to Off, then remove plug from wall.
- Do not place near hot gas/electric burner or heated oven.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- It is recommended that this appliance not be moved when it contains hot oil or other hot liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use appliance for other than intended use.
- DO NOT USE PLASTIC DISHES OR PLASTIC WRAP ON TRAY.

SAVE THESE INSTRUCTIONS

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

WARNING: Do not use an extension cord.

FOR HOUSEHOLD USE ONLY

WELCOME


Congratulations on your purchase of an OSTER® Buffet Server and Warming Tray! To learn more about OSTER® products, please visit us at www.oster.com.

BEFORE FIRST USE

Before using your Oster® Buffet Server and Warming Tray for the first time:

- Remove all packaging materials.
- You should become familiar with all of the parts. Read all Instructions and Safeguards carefully.
- Clean the warming tray base with a mild detergent and a soft moist cloth. **DO NOT SUBMERGE THE WARMING BASE OR LET THE PLUG COME IN CONTACT WITH WATER. DO NOT ALLOW WATER TO SPILL OR SEEP INTO THE WARMING TRAY.** Rinse and wipe dry.
- Wash chafing pans and lids in warm soapy water using a soft cloth or sponge. Do not use abrasive cleansers or pads. Rinse and dry. Chafing pans are dishwasher safe.
- Heat the warming base for approximately 10 minutes at a maximum setting. **NOTE:** Temporary smoking might occur. This is normal during initial use.

PARTS IDENTIFICATION

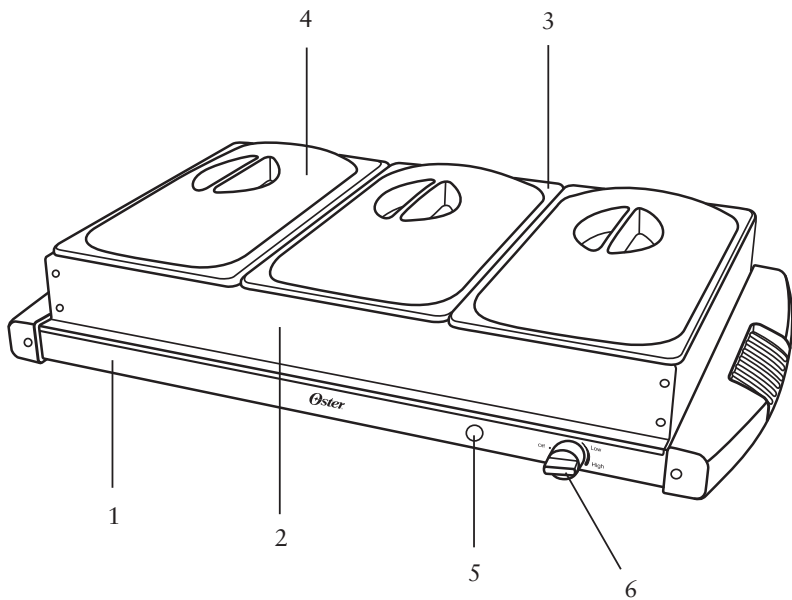

- | | |
|--|----------------------------|
| 1. Warming Tray | 4. Buffet Chafing Pan Lids |
| 2. Buffet Chafing Pan Holder | 5. Power Indicator Light |
| 3. Buffet Chafing Pans,
2.5 Quarts Each | 6. Temperature Dial |

USING YOUR OSTER® BUFFET SERVER AND WARMING TRAY

NOTE: For best results, use Warming tray at maximum heat setting to quickly reach desired temperature, then adjust thermostat. Serving temperature is from 140°F (min.) – 185°F (max.)

- Plug unit in. The red power On light will come on. Set thermostat to desired temperature setting.
- This unit may be used fully assembled with chafing pans or without chafing pans as a stand alone warming tray.
- To use with chafing pans, place chafing pan holder on warming tray first and then arrange pans in holder.
- To retain heat and moisture in foods keep lids on when not serving
NOTE: Food placed in warming base or chafing pans should be FULLY cooked and already hot. The Oster® Buffet Server and Warming Tray is designed to keep food warm only. This product is not a cooking appliance and is not intended to heat cold food.
- Pans are oven-safe. Always use oven mitts to handle hot pans. **NOTE:** Do not use the covers when heating pans in the oven. Lids are not oven safe. Wait 5 minutes before using lids once pans are removed from the oven.
- Chafing Pans are not to be used in the microwave or on a stove top.
- Foods containing little or no liquid should be kept on a lower setting and stirred periodically.
- If using the unit as a warming tray only use containers that are heat-proof. **NOTE:** Warming tray is not designed to keep large, deep pots full of food or liquid warm.
- For best results, use non-metallic serving utensils.

CARE AND CLEANING

CAUTION: Turn off appliance, remove power plug from outlet, and allow to cool thoroughly.

- Wipe warming tray clean with a soft moist cloth.
- Wash chafing pans and lids in warm soapy water using a soft cloth or sponge. Do not use abrasive cleansers or pads. Rinse and dry. Chafing pans are dishwasher safe. Lids are top-rack dishwasher safe.
- **DO NOT SUBMERGE THE BASE OR LET THE HEAT CONTROL COME IN CONTACT WITH WATER.**
- **DO NOT ALLOW WATER TO SPILL OR SEEP INTO THE WARMING TRAY.**

1 Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES
OR TO THE PLACE OF PURCHASE.**



For product questions contact:
Sunbeam Consumer Service

USA: 1.800.334.0759
Canada: 1.800.667.8623

www.oster.com

©2009 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.
All rights reserved. Distributed by Sunbeam Products, Inc. doing business as
Jarden Consumer Solutions, Boca Raton, Florida 33431.

Para preguntas sobre los productos llame:
Sunbeam Consumer Service

EE.UU.: 1.800.334.0759
Canadá: 1.800.667.8623

www.oster.com

©2009 Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions.
Todos los derechos reservados. Distribuido por Sunbeam Products, Inc. operando bajo
el nombre de Jarden Consumer Solutions, Boca Raton, Florida 33431.

SPR-051309