 


# Oster®

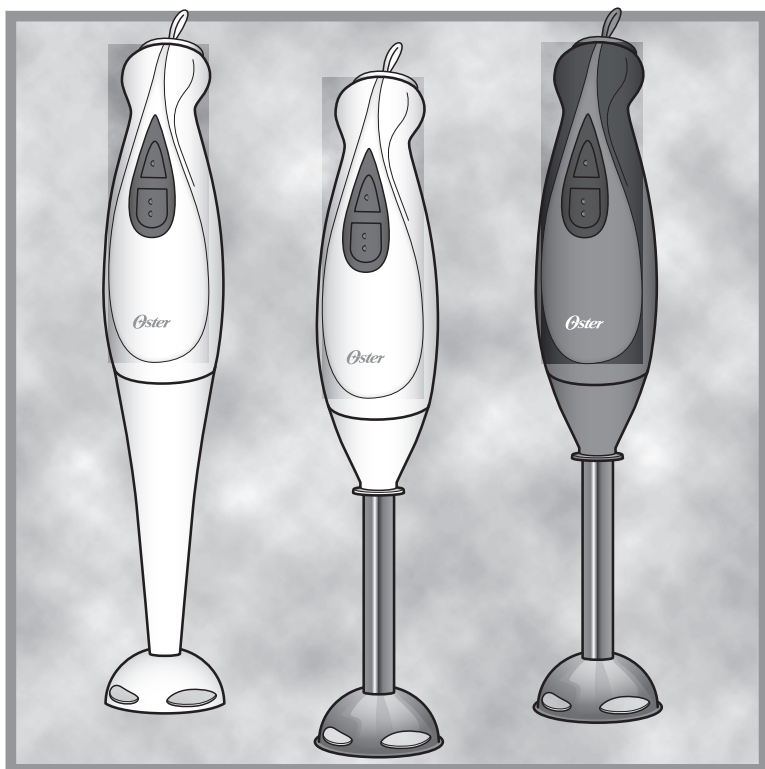

MODELOS  
MODELS

**2600 SERIES/ SERIE 2600**

## INSTRUCTION MANUAL HAND BLENDER

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

---

## MANUAL DE INSTRUCCIONES BATIDORA DE INMERSIÓN

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR ESTE ARTEFACTO

---

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE.**
2. Always operate the stick mixer from power source of the same voltage, frequency and rating as indicated on the product rating plate.
3. Close supervision is necessary when stick mixer is used by or near children, or incapacitated persons. **DO NOT** allow children to use it as a toy.
4. **DO NOT** operate stick mixer with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Take the appliance to the nearest Oster® Authorized Service Center for examination, repair or electrical or mechanical adjustment.
5. **DO NOT** twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split particularly where it enters the unit.
6. To protect against risk of electrical shock, **DO NOT** put stick mixer motor in water or other liquid. This may cause personal injury and/or damage to the product.
7. After each operation, allow the stick mixer to cool for 3 minutes before using it again.
8. **DO NOT** process food containing hard objects that cannot be safely broken up by the blade.
9. To protect against fire, **DO NOT** operate the unit in the presence of explosive and/or flammable fumes.
10. This stick mixer should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool, etc., where the likelihood of immersion or splashing could occur.
11. Switch off and unplug from outlet while not in use, before putting on or taking off parts and before cleaning. Remove by grasping the plug; **DO NOT** pull on the cord.
12. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the stick mixer. A spatula or scraper may be used when the appliance is not in operation.
13. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
14. **DO NOT** place stick mixer on or near a hot burner or in a heated oven.
15. **DO NOT** use over a stove or other heat source. When mixing soups or other hot foods or liquids, remove the saucepan from the heat source before using the stick mixer.
16. This appliance is **NOT** intended to chop ice. Add ice to beverage after blending.
17. Blades are sharp. Handle with extreme care.
18. **DO NOT** use Stick Mixer for other than its intended use.
19. **DO NOT** leave stick mixer unattended while it is operating.
20. The use of attachments not recommended or sold by manufacturer may cause fire, electrical shock or injury.
21. **DO NOT** let cord hang over edge of table or countertop.
22. **DO NOT** use outdoors or for commercial purposes.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised and have been given instructions concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
24. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.

25. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
26. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments farm houses by clients in hotels, motels and other residential type environments bed and breakfast type environments.





**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.**

# SAVE THESE INSTRUCTIONS

## **SHORT POWER SUPPLY CORD INSTRUCTIONS**

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

# DESCRIPTION OF THE APPLIANCE

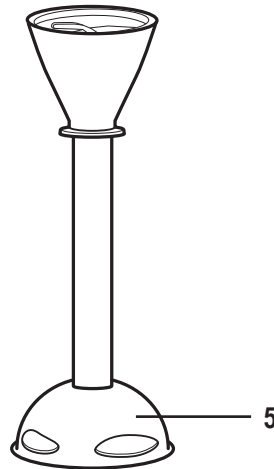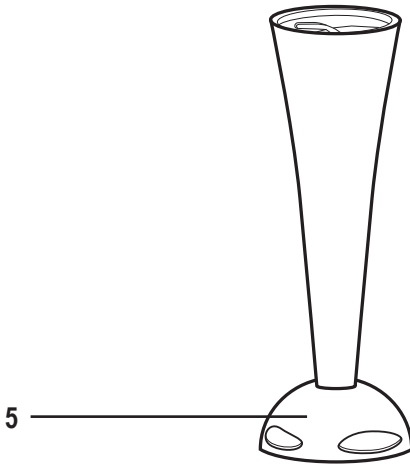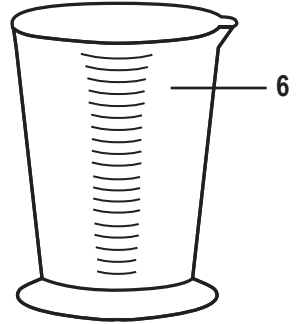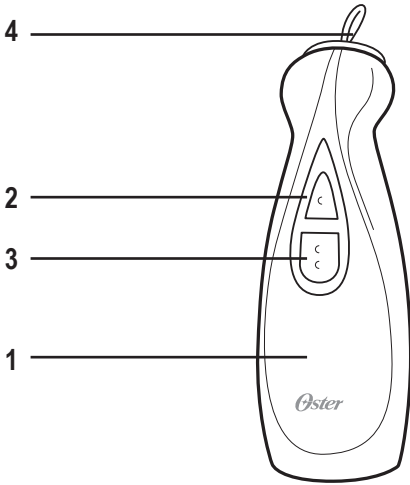

**Models with Plastic Shaft**

**Models with Stainless Steel Shaft**

1. Motor Housing
2. Slow Speed Button
3. High Speed Button
4. Hanging Loop
5. Beater Shaft/ Blade Housing
6. Mixing/ Measuring Cup with Lid

# INSTRUCTIONS FOR USE

## BEFORE USING FOR THE FIRST TIME

Read and follow all the instructions for this section on use and care and find a place to keep this instruction manual ready for future reference.

For your convenience, record the complete model number (located on the back of the motor) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

**NOTE:** The use of attachments not recommended or sold by manufacturer may cause fire, electrical shock, injury or damage to the product.

## USING YOUR HAND BLENDER

Your hand blender is a two-part assembly. The upper part contains the motor housing and the speed buttons. The lower part contains the beater shaft/ blade housing.

**TO LOCK:** Hold the motor housing in the right hand and the beater shaft/ blade housing in the left. Attach the motor housing up to the beater shaft/ blade housing. Rotate the motor housing to the left. The assembly locks firmly.

**TO UNLOCK:** Hold the motor housing in the right hand and the beater shaft/ blade housing in the left. Rotate the motor housing to the right to separate the units.

## TO OPERATE YOUR HAND BLENDER

- Place dual purpose lid on the bottom of the mixing/ measuring cup for added stability.
- Immerse the blade housing completely into ingredients.
- Press the high or low button and begin mixing ingredients by moving the appliance up and down and in circles. For continuous mixing, maintain pressure on button for a maximum of 1 minute.
- Hold the hand blender firmly.

**NOTE:** During mixing, it is normal for suction to be created at the bottom of the container.

- When desired consistency has been reached, release button and lift the hand blender from mixture. To prevent splashing, always release button before removing hand blender from ingredients.

**CAUTION:** To extend the life of this appliance, never let it operate continuously for more than 1 minute at a time. After 1 minute of continuous operation, release button and let appliance rest for 3 minutes before using it again.

**WARNING:** Do not use hand blender in saucepan directly on stovetop. Remove pan from heat before mixing.

## MIXING/MEASURING CUP INFORMATION

- The lid can be easily used as a cover for storage.
- For added stability, use the dual purpose lid on the base of the mixing/ measuring cup.
- The cup, which is included with your hand blender, functions as a mixing cup, a measuring cup and can also be used for storage.

## MEASURING CHART FOR BLENDING CUP

MILLILITERS	CUPS	OUNCES
50	0.21	1.70
100	0.42	3.40
150	0.63	5.00
200	0.85	6.76
250	1.10	8.50
300	1.25	10.00
350	1.50	12.00
400	1.70	13.50
450	1.90	15.25
500	2.10	17.00
550	2.32	18.50
600	2.50	20.25
650	2.75	22.00
700	3.00	24.00

## REMOVAL OF BEATER SHAFT

Grasp beater shaft firmly and rotate motor housing to the right.

# MAINTENANCE AND CLEANING

**Be sure unit is unplugged before attempting to clean.**

Motor unit should be wiped clean with a damp cloth or sponge. **NEVER** immerse motor unit in water.

After using your stick mixer, the blades and mixing cup may be washed by hand with mild soap and water. Wash lid by hand using warm, soapy water with a cloth or sponge.

**CAUTION:** Blades are sharp. Handle carefully. Make sure all parts are completely dry before attempting to use again.

**NOTE:** Do not place stick mixer components in dishwasher.

# STORAGE

Unplug unit and store in a clean, dry place. Never wrap cord tightly around the appliance.

**DO NOT** put any stress on the cord where it enters the unit as it could cause the cord to fray and break.



For product questions contact:

Sunbeam Consumer Service

USA : 1.800.334.0759

Canada : 1.800.667.8623

[www.oster.com](http://www.oster.com)

©2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431. Sunbeam Products, Inc. is a subsidiary of Jarden Corporation (NYSE:JAH).

Para preguntas sobre los productos llame:

Sunbeam Consumer Service

EE.UU.: 1.800.334.0759

Canada : 1.800.667.8623

[www.oster.com](http://www.oster.com)

©2014 Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions. Todos los derechos reservados. Distribuido por Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions, Boca Raton, Florida 33431. Sunbeam Products, Inc. es una subsidiaria de Jarden Corporation (NYSE:JAH).