

# Oster™

*Instruction Booklet* **Wine Kit**

**MODEL FPSTBW8050-033,  
FPSTBW8055**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

## **READ ALL INSTRUCTIONS BEFORE USE.**

- Do not operate Wine Opener after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
- To protect against risk of electrical shock, do not put the Wine Opener in water or other liquid. This may cause personal injury and/or damage to the product.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- Do not use the Wine Opener for other than intended use.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- This product is intended for normal domestic household use only.
- When using the Wine Opener keep your workspace clean and free from potential hazards.
- For indoor use only. Do not expose the Wine Opener to rain or other extreme conditions.
- Use only AA ALKALINE BATTERIES IN THE UNIT. Make sure the battery cover is securely locked in place before operating. Remove batteries from battery compartment if storing unit for extended periods of time. Dispose of batteries per local laws or codes.
- Never force the Wine Opener onto a bottle or attempt to speed up the mechanism. The Wine Opener will work best when it is operated at it's intended speed.


## IMPORTANT SAFEGUARDS (CONT.)

- Do not touch or adjust the Wine Opener's mechanism or the corkscrew spiral. Only hold the Wine Opener by its housing.
- Do not attempt to open bottles if the switch is not working correctly.
- Do not attempt to open the Wine Opener. It has no serviceable parts. Your Wine Opener is guaranteed for one year. In the event of a malfunction in this time please contact our customer services department.


**Caution:** Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

## SAVE THESE INSTRUCTIONS

# LEARNING ABOUT YOUR WINE OPENER

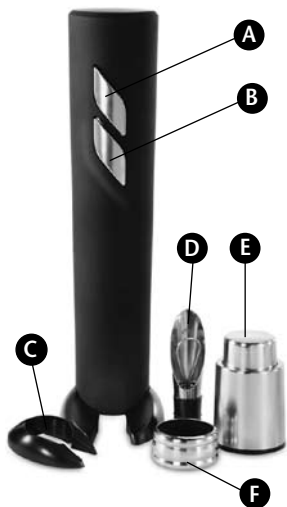

FPSTBW8050-033  
(SOFT GRIP)

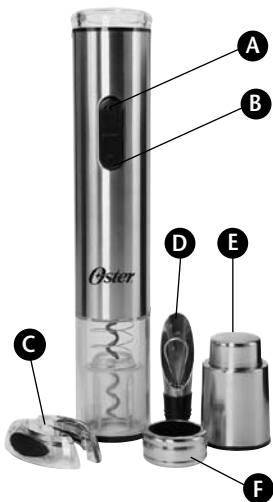

FPSTBW8055  
(STAINLESS STEEL)

- A** Upper Switch
- B** Lower Switch
- C** Foil Cutter

- D** Wine Pourer with Stopper
- E** Wine Vacuum Pump
- F** Wine Collar

# PREPARING YOUR WINE OPENER

Read and follow all the instructions for this section on Use and Care and find a place to keep this instruction manual ready for future reference.

For your convenience, record the complete model number (located on the back of the unit) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

**Thank you** for purchasing the OSTER™ Wine Kit. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements. To learn more about OSTER® products, please visit us at [www.oster.ca](http://www.oster.ca) or call us at 1-800-667-8623.

# USING YOUR WINE OPENER

## INSTALLING THE BATTERIES

Before using your Wine Opener for the first time install a fresh set of batteries in the battery compartment as follows:

- 1 Remove the battery cover
- 2 Insert 4 AA alkaline batteries into the battery compartment, observing proper +/- polarities
- 3 Replace the battery cover
- 4 Replace batteries when required with only AA alkaline batteries.
- 5 Dispose old batteries per local and national laws and regulations.

## TO OPERATE YOUR ELECTRONIC WINE OPENER

The Wine Opener is operated by the simple press of a switch. Press the lower switch to remove a cork from a bottle. Press the upper switch to release a cork from the mechanism after you have removed from the bottle.

(Figure 1)



Figure 1

# USING YOUR WINE OPENER (CONT.)

## TO OPERATE YOUR ELECTRONIC WINE OPENER (CONT.)

Before removing the cork you must remove any foil from the bottle using the foil cutter provided. (Figure 2)

**1** Place the Wine Opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the Wine Opener at an angle to the bottle it will not remove the cork properly. (Figure 3)

**2** Hold the Wine Opener firmly and depress the lower part of the switch. The corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the Wine Opener mechanism has stopped the cork has been fully removed from the bottle.



Figure 2



Figure 3

# USING YOUR WINE OPENER (CONT.)

## TO OPERATE YOUR ELECTRONIC WINE OPENER (CONT.)

- 3** Lift the Wine Opener away from the bottle. To remove the cork simply depress the upper part of the switch. The spiral will turn in a counter-clockwise direction and release the cork. (Figure 4)

**Note:** It has been noted that the Wine Opener may experience problems with a small percentage of plastic/synthetic corks and undersized corks, if in this case the cork should be removed from the bottle manually.



Figure 4

## ACCESSORIES

The following accessories are included with the Oster™ Wine Kit.

### WINE COLLAR

Place wine collar on the neck of an open bottle of wine. This prevents wine dripping down the side of the bottle when pouring. (Figure 5)



Figure 5



## ACCESSORIES (CONT.)

### WINE POURER WITH STOPPER

Place wine pourer in the opening of an open bottle of wine. This will make it easier to pour wine from the bottle. The stopper can then be placed inside the pourer to close up the bottle. (Figure 6)



Figure 6

### WINE VACUUM PUMP

Place wine vacuum pump on the opening of an open bottle of wine. Press down on the center section to remove excess air from the bottle. This helps to reduce oxidation and preserve wine longer than standard stoppers. (Figure 7)



Figure 7

## CARE & CLEANING

### CLEANING YOUR WINE OPENER

Motor Unit and accessories should be wiped clean with a damp cloth or sponge.

**NEVER immerse motor unit in water.**

**CAUTION:** cork screw spiral is sharp. Handle carefully.

**NOTE:** DO NOT place Wine Opener or, accessories in dishwasher.

# NOTES

## **1 Year Limited Warranty**

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### **What are the limits on JCS's Liability?**

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### **How to Obtain Warranty Service**

#### **In the U.S.A. –**

**If you have any** question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

#### **In Canada –**

**If you have any** question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

# *Oster*<sup>MC</sup>

Pour toute question en ce qui concerne le produit, appelez le  
service à la clientèle de Sunbeam

États-Unis: 1 800 334.0759

Canada: 1 800 667.8623

[www.oster.ca](http://www.oster.ca)

©2010 Sunbeam Products, Inc. faisant affaires sous le nom de  
Jarden Consumer Solutions. Tous droits réservés. Importé et distribué par  
Sunbeam Corporation, (Canada) Limited faisant affaires sous le nom de  
Jarden Consumer Solutions, 20B Hereford St., Brampton ON Canada L6Y 0M1