

# *Oster*<sup>TM</sup> *Gourmet* COLLECTION

*User Manual*

## **BLENDER**

**MODEL BLSTCB0100-033**



*www.oster.ca*

P.N. 138216-002-000

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

**Read all instructions before using.**

1. Unplug cord from outlet when not in use or before cleaning.
2. To protect against risk of electrical shock, do not immerse the cord, plug or motor base in water or any other liquids.
3. Do not let cord hang over edge of table or counter or touch hot surfaces.
4. Never leave appliance unattended when in use.
5. Close supervision is necessary when used near children.
6. Avoid ANY contact with blades or moveable parts. Keep hands and utensils out of jar while blending to prevent personal injury or damage to the blender. A rubber spatula may be used only when the blender is not running.
7. The blade is sharp. Handle with care.
8. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
9. Always put the lid on the jar before operating the blender.
10. Do not blend boiling liquids in the blender.
11. When blending hot liquids, remove the flip-top spout cover from the lid. The steam from hot liquids may push lid off jar during blending. To prevent possible burns, do not fill jar beyond the 4 cup level. With the protection of oven mitt or towel, place one hand on top of lid. Keep exposed skin away from lid. Start blending at lowest speed.
12. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
13. Do not use outdoors or for commercial purposes; this appliance is for household use only.
14. Use this appliance for its intended use as described in this manual. Do not use attachments that are not recommended by the manufacturer; they may cause injury.
15. Always operate on a flat surface.
16. Turn knob to OFF position and unplug power cord when it is not in use, before taking off or putting on parts and before cleaning.
17. The use of attachments not made by Oster™ products, including canning or ordinary jar and processing assembly parts, is not recommended and may cause injury to persons.

## SAVE THESE INSTRUCTIONS

# **THIS UNIT IS INTENDED FOR HOUSEHOLD USE ONLY**

The maximum rating marked on the product is based on the attachment that draws the greatest load. Other attachments may draw less power.

## **POWER CORD INSTRUCTIONS**

Please follow the instructions below to ensure the safe use of the power cord.

- This appliance is equipped with a polarized plug. This type of plug has one blade that is wider than the other. This plug will fit in a polarized outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.
- You may use an extension cord, if necessary, but be certain to follow these guidelines:
  - The marked electrical rating of the extension cord must be at least 120/127 volt, 60 Hz, 10A.
  - The extension must be arranged so that it will not drape over the countertop or tabletop, will not be within the reach of children and will not be tripped over.
- Do not pull, twist or otherwise abuse the power cord.

## **SAVE THESE INSTRUCTIONS**

## BEFORE USE

Remove all packaging materials and any promotional labels or stickers from your Blender.

Be sure all parts (listed under Features) of your new appliance have been included before discarding any packaging materials. You may want to keep the box and packing materials for use at a later date.

Before using your Oster™ Blender for the first time, remove any dust from shipping by wiping the base, cover, and controls with a damp cloth.

## FEATURES



# How To

## Jar Assembly

1. Turn jar upside down so the small opening is at the top.
2. Place sealing ring over jar opening.
3. Place blade into jar.
4. Place threaded jar nut over blade and jar. Place the threaded jar nut on jar and turn it clockwise to tighten.
5. Place jar assembly onto base.
6. Place ingredients into jar according to your recipe. For best results always add liquids first when blending.
7. Place lid on jar.
8. Make sure Knob is pointing to OFF position, then plug the power cord into a 120 Volt AC electrical outlet.



**NOTE:** Avoid contact with blades and moveable parts.

## Speed Modes

- To blend in High Speed, dial Control Knob clockwise to the farthest setting.
- To blend in Medium Speed, dial Control Knob clockwise halfway through the speed selection.
- To blend in Low Speed, dial Control Knob clockwise  $\frac{1}{4}$  of the way through the speed selection.
- To Stop blending, turn left to “OFF”. The motor will come to a stop.
- You can move between speeds at any time while blending by turning the Control Knob left or right. The new speed will start without interruption.
- Turn Control Knob counterclockwise to the “PULSE” setting will give a momentary pulse at high speed. The motor will then stop when released.

# How To (continued)

## To Use The Pulse Setting

The “PULSE” setting momentarily activates the blender at HIGH speed. You may also continuously move the Control Knob to “PULSE”.

- To pulse, turn the Control Knob counterclockwise to “PULSE” to activate a momentary high speed. The blender will run at high speed as long as you hold the knob. The motor will stop when you release the knob.

## Tips

- Put liquids in the jar first, unless a recipe says otherwise.
- Crushing ice: Crush approximately 3 cups of ice at a time with 2 cups of liquid for optimal results.
- Do not remove the lid while in use. Remove filler cap to add smaller ingredients.
- This blender has been designed to gently process foods when operating at low speeds. If blades do not rotate during operation, simply choose a higher speed.
- This blender will not mash potatoes, whip egg whites or substitute dairy toppings, mix stiff dough or grind raw meat.

## Hot Foods

- Open the Filler Cap to vent steam. Tilt Filler Cap away from you. Keep hands away from the cover opening to prevent possible burns.
- When working with hot liquids, remove Filler Cap and start blending at a low speed. Then move to a faster speed. **DO NOT** add liquid over the 4 cup (1 liter) level.

## Care & Cleaning

**To keep your Oster™ product looking new and to remove fingerprints:**

When the Oster™ product is not in use, please wipe the outside of unit with warm water or stainless steel appliance cleaner, then wipe and dry.

**IMPORTANT: Place Control Knob to OFF position and unplug power cord before cleaning base. Do not immerse the blender-base in water or any other liquids.**

Use a damp, soft sponge with mild detergent to clean the outside of the blender base and control panel. All parts except for the blender base are dishwasher safe. Place sealing ring in bottom basket of dishwasher. You can also wash the parts in warm, soapy water. Rinse well and dry.

## Storing

After cleaning, reassemble blade to jar with sealing ring and threaded jar bottom. Store blender with cover ajar to prevent container odor.

# Recipes

## Ginger Peach Smoothie



Makes Cups	2	3	4	5	6
Yogurt (oz)	8	12	16	20	24
Ice Cubes (medium)	2	3	4	5	6
Frozen Sliced Peaches	5	8	10	13	15
Frozen Banana (2" chunks)	2	3	4	5	6
White Grape Juice (oz)	3	4-½	6	7-½	9
Ground Ginger (tsp)	⅛	⅓	¼	⅓	¾

## Strawberry Smoothie



Makes Cups	2	3	4	5	6
Yogurt (oz)	7	11	14	18	21
Ice Cubes (medium)	2	3	4	5	6
Frozen Strawberry (1" dia max)	2	3	4	5	6
Frozen Banana (2" chunks)	2	3	4	5	6
White Grape Juice (oz)	3	4-½	6	7-½	9
Ground Ginger (tsp)	⅛	⅓	¼	⅓	¾

## Vanilla Milkshake



Makes Cups	2	3	4	5	6
Ice Cream (cups)	2	3	4	5	6
Milk (oz)	6	9	12	15	18
Vanilla (tsp)	⅛	¼	¼	¾	¾

## Margarita



Makes Cups	2	3	4	5	6
Tequila (oz)	2	3	4	5	5-½
Margarita Mix (oz)	6	9	12	15	18
Ice (cups)	1-½	2-½	3	4	5

# Warranty

## FIVE YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of five years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### How to Obtain Warranty Service

#### In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

#### In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES  
OR TO THE PLACE OF PURCHASE**

Please visit us online at [www.oster.ca](http://www.oster.ca) to register your product online with us and for other helpful information.







For product questions contact: Jarden Consumer Service

USA : 1.800.334.0759  
Canada : 1.800.667.8623  
[www.oster.ca](http://www.oster.ca)

Please visit our website for more product info,  
the Oster<sup>TM</sup> store and delicious recipes.

© 2012 Sunbeam Products, Inc. doing business as  
Jarden Consumer Solutions. All rights reserved.

In the U.S.A., distributed by Sunbeam Products, Inc. doing business as  
Jarden Consumer Solutions, Boca Raton, FL 33431.

In Canada, imported and distributed by Sunbeam Corporation (Canada) Limited,  
doing business as Jarden Consumer Solutions,  
20B Hereford St., Brampton, Ontario L6Y 0M1.

GSC-TH0912-120513

Printed in the U.S.A.