

Oster™

ELECTRIC WINE OPENER

SACACORCHOS ELÉCTRICO

User Guide/ Guía del Usuario: **FPSTBW8220**
FPSTBW8225



Safety
Seguridad



How to use
Cómo usar



Care & Cleaning
Cuidado y Limpieza



Warranty
Garantía

www.oster.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- **READ ALL INSTRUCTIONS BEFORE USE**
- Do not operate Electric Wine Opener with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner.
- To protect against risk of electrical shock, do not put the Electric Wine Opener in water or other liquid. This may cause personal injury and/or damage to the product.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- Do not use the Electric Wine Opener for other than intended use.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- This product is intended for normal domestic household use only.
- When using or recharging the Electric Wine Opener keep your workspace clean and free from potential hazards.
- For indoor use only. Do not expose the Electric Wine Opener or charging unit to rain or other extreme conditions
- Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove.
- Never force the Electric Wine Opener onto a bottle or attempt to speed up the mechanism. The Electric Wine Opener will work best when it is operated at it's intended speed.
- Do not touch or adjust the Electric Wine Opener's mechanism or the corkscrew spiral. Only hold the Electric Wine Opener by its stainless steel housing.
- Do not attempt to open bottles if the switch is not working correctly.



- Do not attempt to open the Electric Wine Opener or the recharging unit. It has no serviceable parts. Your Electric Wine Opener is guaranteed for one year. In the event of a malfunction in this time please contact our customer services department.
- Only recharge the Electric Wine Opener using the recharging unit and power cord supplied.
- Never remove the plug from the socket by pulling the power cord.

Caution: Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

THIS UNIT FOR HOUSEHOLD USE ONLY

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

WARNING: Do not use an extension cord.



LEARNING ABOUT YOUR ELECTRIC WINE OPENER



- a** Electric Wine Opener
- b** Soft Grip
- c** Foil Cutter
- d** Charging Stand
- e** Charging LED Light
- f** Up/Down Switch
- g** Plug





HOW TO:

Preparing your Electric Wine Opener

Read and follow all the instructions for this section on Use and Care and find a place to keep this instruction manual ready for future reference.

For your convenience, record the complete model number (*located on the back of the motor*) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

Thank you for purchasing the OSTER™ Electric Wine Opener. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements. To learn more about Oster™ products, please visit us at www.oster.com or call us at 1-800-334-0759.



Operating Instructions

Connection and Use

We recommend that you charge your electric wine opener for at least eight hours before using it for the first time. Please follow the instructions for recharging below:

Recharging your Electric Wine Opener

Plug one end of the adapter cord into the base of the recharging unit and the other end into a main socket. Place the Electric Wine Opener into recharging unit ensuring that it is firmly in position and that it is fully engaged with the recharging connection. It will take approximately 6-8 hours to recharge your electric wine opener. The Charging LED light will illuminate when unit is charging.

To Operate Your Electric Wine Opener

The Electric Wine Opener is operated by one single switch. The switch has two functions. Press the lower part of the switch to remove a cork from a bottle. Press the upper part of the switch to release a cork from the mechanism after you have removed from the bottle. (Figure 1)

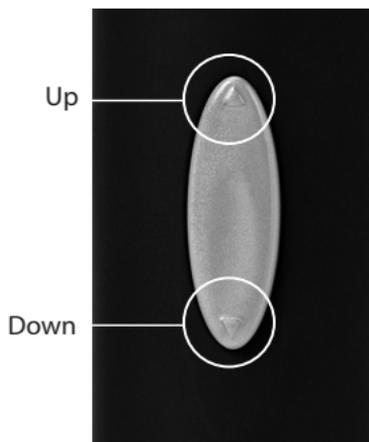


Figure 1



Before removing the cork you must remove any foil from the bottle using the foil cutter provided. (Figure 2)

- 1 Place the Electric Wine Opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the Electric Wine Opener at an angle to the bottle it will not remove the cork properly. (Figure 3)



Figure 2

- 2 Hold the Electric Wine Opener firmly and depress the lower part of the switch. The corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the Electric Wine Opener mechanism has stopped the cork has been fully removed from the bottle.



Figure 3



- 3 Lift the Electric Wine Opener away from the bottle. To remove the cork simply depress the upper part of the switch. The spiral will turn in a counter-clockwise direction and release the cork. (Figure 4)
- 4 Always return the Electric Wine Opener to the recharging unit when finished with it. This will protect the mechanism while it is not in use.

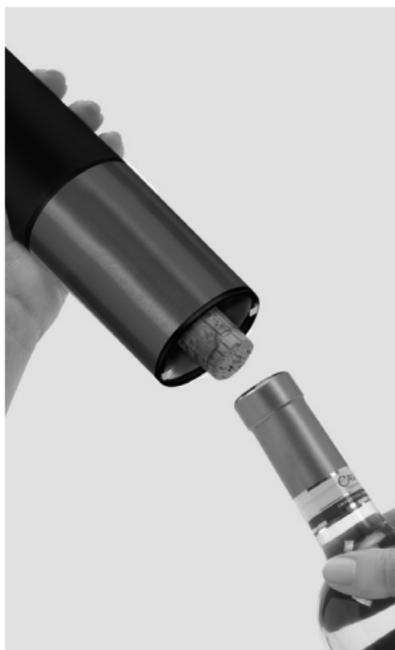


Figure 4



CARE & CLEANING

Cleaning your Electric Wine Opener

Motor Unit should be wiped clean with a damp cloth or sponge.

NEVER immerse motor unit in water.

CAUTION: cork screw spiral is sharp. Handle carefully.

NOTE: DO NOT place Electric Wine Opener in dishwasher.





1 Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.



JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.





For product questions contact:

Sunbeam Consumer Service

USA : 1.800.334.0759

Canada : 1.800.667.8623

www.oster.com

©2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

Para preguntas sobre los productos llame:

Sunbeam Consumer Service

EE.UU.: 1.800.334.0759

Canada : 1.800.667.8623

www.oster.com

©2012 Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions. Todos los derechos reservados. Distribuido por Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions, Boca Raton, Florida 33431.

GCDS-OST25123-SZ