



*User Manual*

**Countertop Oven**

*Notice d'emploi*

**Four posable**

MODEL/  
MODÈLE

**6081/6085**



# IMPORTANT SAFEGUARDS

## SAVE AND READ THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- **READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE COUNTERTOP OVEN.**
- Do not touch hot surfaces. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts. Always use the oven handles when moving the unit.
- When the unit is not in use and before cleaning, unplug the countertop oven from the wall outlet.  
**Note:** Make sure the oven is turned off before unplugging.
- To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
- Close supervision is always necessary when this or any appliance is used near children. This appliance is not for use by children.
- Do not operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Return the countertop oven to the nearest Authorized Sunbeam Appliance Service Center for examination, repair or electrical or mechanical adjustment.
- Do not use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
- Do not use outdoors or for commercial purposes.
- Do not use this appliance for other than its intended use.
- Do not let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.
- Do not place the appliance near a hot gas or electric burner or in a heated oven.
- Extreme caution should be used when using containers constructed of material other than metal or glass.
- A fire may occur if the countertop oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any items on top of the appliance when in operation.
- When using countertop oven, pull the unit out a minimum of 6 inches away from the wall or other cords.
- Do not store any materials, other than manufacturer's recommended accessories, in this unit when not in use.
- Do not place any flammable materials in oven, such as paper, cardboard, plastic or any materials that may catch fire or melt.
- Do not cover the oven tray with metal foil. This will cause overheating of the appliance.
- Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
- When broiling, use extreme caution when removing pan or disposing of hot grease.
- To turn this appliance off, return all controls to the "OFF" position.

## THIS UNIT IS FOR HOUSEHOLD USE ONLY

### SHORT POWER SUPPLY CORD INSTRUCTIONS

 
A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### For Products Purchased in the United States and Canada Only

To reduce the risk of electrical shock, this appliance has a polarized plug (*one blade is wider than the other*). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to defeat this safety feature.




# SAVE THESE INSTRUCTIONS

English-1

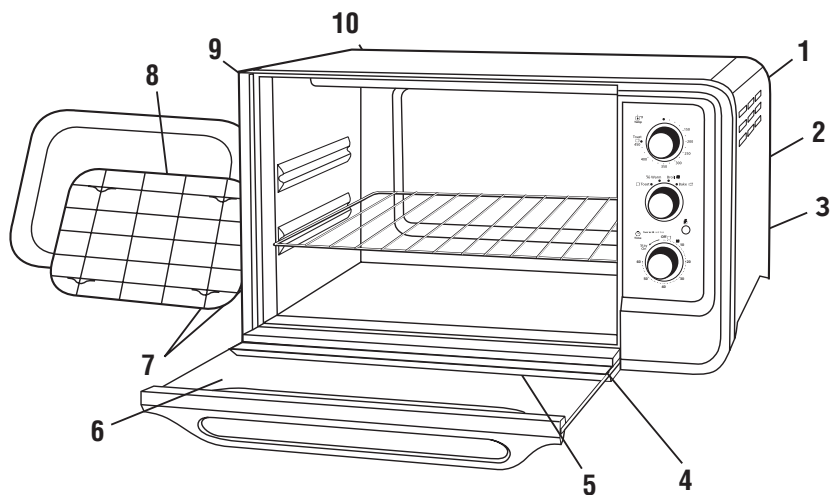

## Learning About Your Countertop Oven

   1. **Temperature Control Knob** – Adjust the dial thermostat to the desired temperature. (See Figure 1)
2. **Function Selector Knob** – Select cooking function by turning knob to desired setting. (See Figure 2)
3. **Timer Control Knob with Bell Signal** – Set cooking time up to 60 minutes. Will automatically turn the oven OFF at the end of the cooking time. (See Figure 3)
4. **Removable Crumb Tray** – For crumb or fallen food particles collection. Pulls out for easy cleaning.
5. **Removable Wire Rack** – See “Positioning Rack” section.
6. **Tempered Glass Door** – For front viewing of food.
7. **Two Rack Positions**
8. **Baking Pan & Broil Rack** – Use for all your baking, broiling and grilling needs.
9. **Easy Clean Interior Walls** – Allows fast clean up.
10. **Pizza Fit Capacity** – Fits most large frozen pizzas.

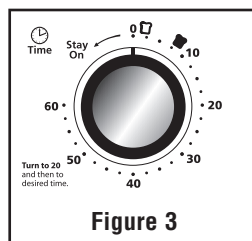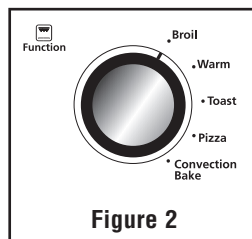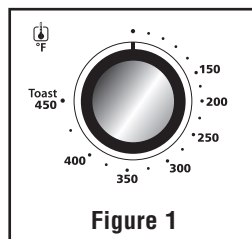

# Preparing To Use Your Countertop Oven for the First Time

If you are using your Countertop oven for the first time, please be sure to:

- Remove any stickers from the surface of the oven.
- Open oven door and remove all printed documents and paper from inside the Countertop Oven.
- Clean the rack, and pan with hot water, a small amount of dishwashing liquid and a non-abrasive cleaning pad.
- **DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.**
- Dry the unit thoroughly before using.
- Select a location for the Countertop Oven. The location should be in an open area on a flat counter where the plug will reach an outlet.
- Plug the Countertop Oven into a 120 Volt AC electrical outlet.

**WARNING:** When Countertop Oven is in use or cooling down, please be sure there is a 6-inch clearance between the Countertop Oven and any other surface including cords. Be sure the cord is not resting against the back of the Countertop Oven.

## To Use the Toast Function

Step 1. Place food on Wire Rack.

Step 2. Close glass door completely.

Step 3. Turn the Function dial to Toast.

Step 4. Turn the Temperature dial to 450° F

Step 5. Turn the Timer past 20 minute mark to engage timer, then back to desired toast time anywhere between the Toast symbols.

Step 6. When toasting is complete, open door completely and remove food.\*\*

For best toasting results, position the rack in the upper position.

## To Use the Convection Bake Function

The Convection Heat function turns on a built in fan that circulates hot air in the oven chamber to better heat food.

**Preheat oven 5 minutes at desired temperature with oven rack in place.**

Step 1. Place baking pan with food inside on wire rack.

 
 
Step 2. Close glass door completely.

Step 3. Turn the Function dial to Convection Bake.

Step 4. Turn the Temperature dial to desired setting.

Step 5. Turn the Timer to desired cook time.\*

Step 6. When baking is complete, open door completely and remove food.\*\*

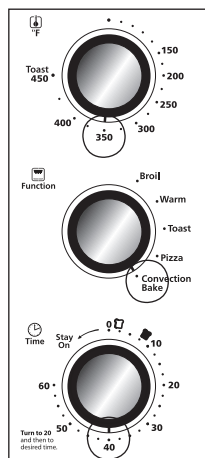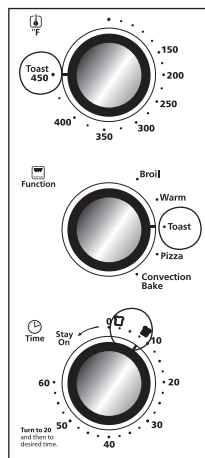

## To Use the Warm Function

- Step 1. Place baking pan with food inside on wire rack.
- Step 2. Close glass door completely.
- Step 3. Turn the Function dial to Warm.
- Step 4. Turn the Temperature dial to 200° F.
- Step 5. Turn the Timer to desired warming time.\*
- Step 6. When Warming is complete, open door completely and remove food.\*\*

## To Use the Pizza Function

- Step 1. Place baking pan with food inside on wire rack.
- Step 2. Close glass door completely.
- Step 3. Turn the Function dial to Pizza.
- Step 4. Turn the Temperature dial to 400° F.
- Step 5. Turn the Timer to desired cook time.\*
- Step 6. When cooking is complete, open door completely and remove food.\*\*

 
 
 
## To Use the Broil Function

Adjustable Broil allows the oven to broil at any temperature. Great for melting cheese at 150° F or cooking fish at 400° F. Adjust as needed.

- Step 1. Place food on broil rack or on baking pan if needed.
- Step 2. Close glass door leaving approximately a 3-inch opening at the top of the Countertop Oven.
- Step 3. Turn the Function dial to Broil.
- Step 4. Turn the Temperature dial to desired temperature.
- Step 5. Turn the Timer to desired cook time.\*
- Step 6. When Broiling is complete, open door completely and remove food.\*\*

**\*\*WARNING:** Cooked food and metal rack can be very hot, handle with care. Do not leave Countertop Oven unattended.

*\*Special note: If cook time is less than 20 minutes, you must turn Timer past the 20 minute mark to engage the timer then back to desired time.*

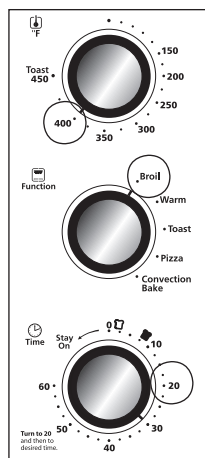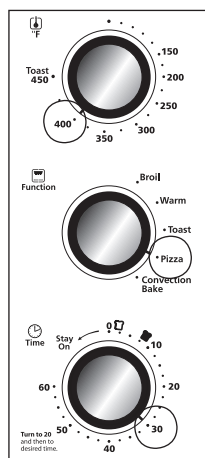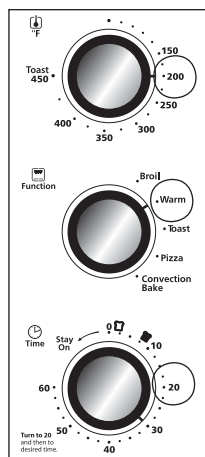


## Positioning Rack

- To accommodate a wide variety of foods the oven has two rack positions. The rack can be inserted in the oven in the upper or lower rack guides. The rack will fit into either of the rack guides inside of the Countertop Oven. (See Figure Below)
- Before removing the rack allow the unit to cool.
- To remove the rack, open the oven door and pull the rack towards the front of the oven. The rack will slide on the rack guides on the inside of the oven.

**PLEASE NOTE:** the oven rack may tilt downward causing food to shift when the rack is pulled out, proceed with caution.

- Positioning of the oven rack will depend on the size of the food and desired browning. Adjust rack downward to prevent top browning and upward to prevent bottom burning.

 For best toasting results, position the rack in the upper rack guide.

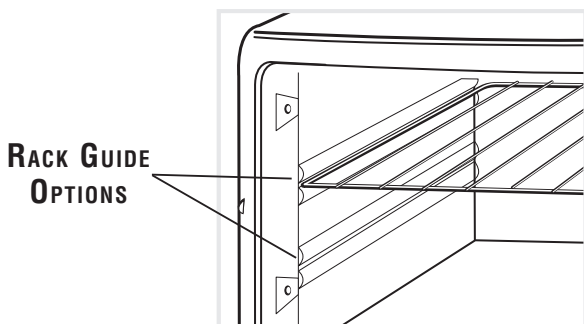

## Cleaning Your Countertop Oven

- Step 1. Turn all knobs to off position then unplug unit and let it cool.
- Step 2. Wipe unit down with damp cloth. **DO NOT IMMERSE IN WATER.**  
Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.
- Step 3. Remove crumb tray by pulling out of Countertop Oven.
- Step 4. Shake off crumbs from crumb tray. Cleaning the crumb tray often will avoid any accumulations.
- Step 5. Remove wire rack and clean with damp cloth or place in top rack of dishwasher.

## Storing Your Countertop Oven

Allow the appliance to cool completely before storing. If storing the Countertop Oven for long periods of time make certain that the Countertop Oven is clean and free of food particles. Store the Countertop Oven in a dry location such as on a table or countertop or cupboard shelf. Wind the electrical cord around the cord storage brackets. Other than the recommended cleaning, no further user maintenance should be necessary.

HELPFUL TIPS / TROUBLESHOOTING		
PROBLEM	POTENTIAL CAUSE	SOLUTION
<ul style="list-style-type: none"><li>Overcooked / Undercooked Foods</li></ul>	<ul style="list-style-type: none"><li>Incorrect temperature or time setting</li><li>Rack placement</li></ul>	<ul style="list-style-type: none"><li>You may have to adjust the time and temperature to desired taste.</li><li>Because your Countertop Oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time.</li><li>Refer to “Positioning Rack” Section, Page English-5. Rack may need to be adjusted to accommodate food type.</li></ul>
<ul style="list-style-type: none"><li>Burnt Smell initial burnoff</li></ul>	<ul style="list-style-type: none"><li>Food build-up inside oven, on heating elements or in crumb tray.</li></ul>	<ul style="list-style-type: none"><li>Refer to “Cleaning Your Countertop Oven” Section, Page English-6.</li></ul>
<ul style="list-style-type: none"><li>Oven does not turn ON</li></ul>	<ul style="list-style-type: none"><li>Unit is unplugged</li><li>Turn Timer</li></ul>	<ul style="list-style-type: none"><li>Plug the Countertop Oven into a 120-volt AC electrical outlet.</li><li>Set timer knob and temperature knob to desired setting. Both must be turned on to operate the Countertop Oven.</li></ul>
<ul style="list-style-type: none"><li>Only one heating element is heating up</li></ul>	<ul style="list-style-type: none"><li>Function setting selection determines which heating element will operate.</li></ul>	<ul style="list-style-type: none"><li>Check to see if the Broil setting is selected.</li></ul>
<ul style="list-style-type: none"><li>Heating elements do not stay ON</li></ul>	<ul style="list-style-type: none"><li>Heating elements will cycle ON and OFF to maintain proper heat.</li></ul>	<ul style="list-style-type: none"><li>Confirm function setting is the correct one of choice.</li></ul>

## ***1-Year Limited Warranty***

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### **What are the limits on JCS's Liability?**

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### **How to Obtain Warranty Service**

#### **In the U.S.A.**

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

#### **In Canada**

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**





For product questions:  
Jarden Consumer Service  
Canada : 1.800.667.8623  
USA : 1.800.334.0759

[www.oster.ca](http://www.oster.ca)

©2009 Sunbeam Products, Inc. doing business as  
Jarden Consumer Solutions. All rights reserved.  
In the U.S., distributed by Sunbeam, Products, Inc. doing business as  
Jarden Consumer Solutions, Boca Raton, FL 33431.  
In Canada, distributed by Sunbeam Corporation (Canada) Limited doing  
business as Jarden Consumer Solutions,  
20B Hereford Street, Brampton, Ontario L6Y 0M1.

Pour toute question en ce qui concerne ce produit,  
appelez le service à la clientèle de Jarden

Canada: 1 800 667.8623  
États-Unis: 1 800 334.0759

[www.oster.ca](http://www.oster.ca)

©2009 Sunbeam Products, Inc., faisant affaires sous le nom  
de Jarden Consumer Solutions. Tous droits réservés.  
Aux États-Unis, distribué par Sunbeam, Products, Inc. faisant affaires sous  
le nom de Jarden Consumer Solutions, Boca Raton, FL 33431.  
Au Canada, distribué par Sunbeam Corporation (Canada) Limited faisant  
affaires sous le nom de Jarden Consumer Solutions,  
20B Hereford Street, Brampton (Ontario) L6Y 0M1.

GSC-MM0509-533901